STANDARD INSTALLATION




INSTALLATION INSTRUCTION FOR MODEL ASM-1 _FALLGUARD®SKYLIGHT SCREENS

WARNING: SKYLIGHT CAN BE BRITTLE. DO NOT TOUCH DOME, PYRAMID OR GLAZING. WEAR GLOVES WHEN HANDLING SCREEN. WEAR SAFETY GLASSES WHEN INSTALLING FALLGUARD RAILS.

INSTALLATION PROCEDURE:

- 1. CENTER FALLGUARD RAIL ONTO LENGTH SIDE OF SKYLIGHT RETAINING FRAME (FIGURE 1)
- 2. SECURE THE FALLGUARD RAIL ONTO SKYLIGHT RETANING FRAME WITH PROVIDED GALVANIZED STEEL HEX WASHER SELF-DRILLING SCREWS THROUGH THE PRE-PUNCHED HOLES (FIGURE 1& 2) (NUMBER OF SCREW VARIES TO DIMENSIONS).
- 3. CENTER THE SCREEN OVER THE SKYLIGHT AND INSTALL THE BASES OF SCREENS INTO THE RAIL NOTCH OPENINGS (FIGURE 3)
- 4. INSTALL THE FURNISHED STAINLESS STEEL CLIPS BY SNAPPING THEM IN PLACE ON THE RAIL NOTCHES. START ON THE ENDS AND SPACE ABOUT ~ 12"-18" APART (ONE BAG PER FALLGUARD SCREEN!!).

 CLIPS DO NOT NEED TO BE ON ALL NOTCHES #CLIPS/2= 1 RAIL (FIGURE 4)

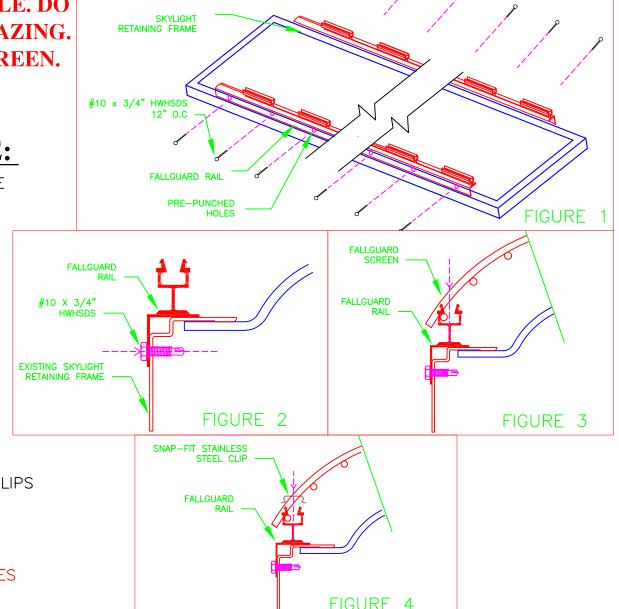

REVERSE INSTALLATION



INSTALLATION INSTRUCTION FOR MODEL ASM-1 FALLGUARD®SKYLIGHT SCREENS

WARNING: SKYLIGHT CAN BE BRITTLE. DO NOT TOUCH DOME, PYRAMID OR GLAZING. WEAR GLOVES WHEN HANDLING SCREEN. WEAR SAFETY GLASSES WHEN INSTALLING FALLGUARD RAILS.

INSTALLATION PROCEDURE:

- 1. CENTER FALLGUARD RAIL ONTO LENGTH SIDE OF SKYLIGHT RETAINING FRAME (FIGURE 1)
- 2. SECURE THE FALLGUARD RAIL ONTO SKYLIGHT RETANING FRAME WITH PROVIDED GALVANIZED STEEL HEX WASHER SELF-DRILLING SCREWS THROUGH THE PRE-PUNCHED HOLES (FIGURE 1& 2) (NUMBER OF SCREW VARIES TO DIMENSIONS).
- 3. CENTER THE SCREEN OVER THE SKYLIGHT AND INSTALL THE BASES OF SCREENS INTO THE RAIL NOTCH OPENINGS (FIGURE 3)
- 4. INSTALL THE FURNISHED STAINLESS STEEL CLIPS BY SNAPPING THEM IN PLACE ON THE RAIL NOTCHES. START ON THE ENDS AND SPACE ABOUT ~ 12"-18" APART (ONE BAG PER FALLGUARD SCREEN!!).

 CLIPS DO NOT NEED TO BE ON ALL NOTCHES #CLIPS/2= 1 RAIL (FIGURE 4)

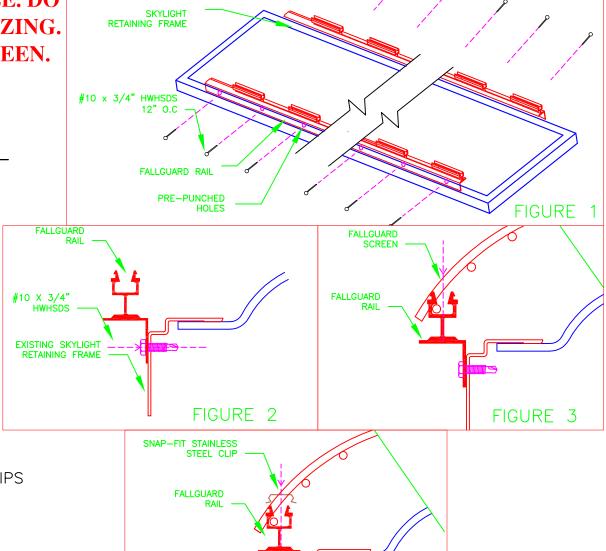


FIGURE 4