

MODEL TSSR FALLGUARD® SAFETY SKYLIGHT SCREEN

WARNING: DO NOT PLACE BODYWEIGHT ON SKYLIGHT DURING INSTALLATION. USE EXTREME CAUTION WHEN INSTALLING THE FALLGUARD® SKYLIGHT SCREENS. WEAR GLOVES WHEN HANDLING SCREEN AND WEAR SAFETY GLASSES WHEN USING DRILL.

INSTALLATION PROCEDURE:

- 1. INSTALL THE RAILS SO THAT SCREEN HOLDING NOTCHES IN A LOWER POSITION (OPENIGN FACE UPWARD TOWARD ROOF PEAK) (FIGURE 1).
- 2. ATTACH THE FLANGE OF THE TSSR RAILS TO THE OUTSIDE OF THE STANDING SEAM WITH THE FURNISH HEX WASHER SCREWS HEAD SELF—DRILLING SCREWS. (FIGURE 2).
- 3. SLIDE THE FALLGUARD SKYLIGHT SCREEN INTO THE NOTCHES ON THE ATTACHED RAILS (FIGURE 3).

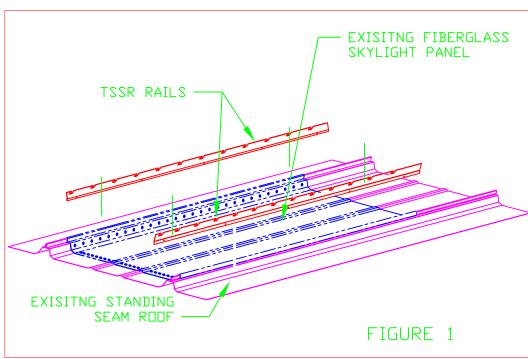

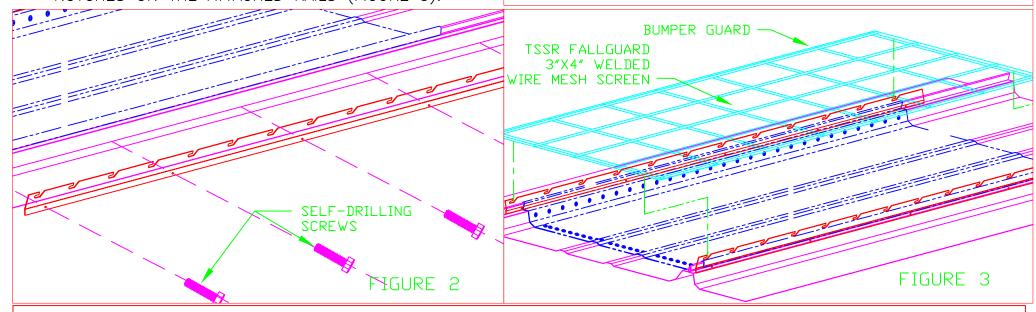

SKYLIGHTS • HEAT & SMOKE VENTS • FALLGUARD® SKYLIGHT SAFETY SCREENS

PHONE (713)-673-7710 OR (800)-231-6117 • FAX (713)-673-7236 • EMAIL: FALLGUARD@PLASTECO.COM • WEBSITE: WWW.PLASTECO.COM